

QUICK START GUIDE



HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE

drive HD™

Record your ride



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and/or other countries.

CONTROLS & CONNECTIONS



The functions of Buttons 1-4 are indicated by the icon directly above each button and change depending on the state of the unit.

KEY DASH CAM FEATURES

CONTINUOUS LOOP RECORDING
When the MicroSD Card is full it will overwrite the oldest clips to make room for new footage.

G-SENSOR
A built-in accelerometer senses sudden accelerations or collisions and automatically protects footage surrounding the incident so that it will not be overwritten by Loop Recording.

PARKING MODE
Parking Mode provides security while your vehicle is parked. If the dash cam doesn't sense any motion for a set time, the screen will turn off and recording will stop.
If motion is detected or the G-Sensor is triggered, the camera will automatically wake up and start recording again.

Note: Parking Mode is **OFF** by default. You can turn it **ON** in the Video Settings Menu.

ACTION CAM MODE
Action Cam Mode can be turned on by entering Video Settings → Loop Clip Time. In this mode, continuous loop recording and the G-Sensor are disabled.

INSTALLATION

1 MOUNT
Screw the included suction cup into the mount. Slide the mount into the camera and press the lever to secure the unit to your vehicle's windshield.

2 POWER
Plug the unit into your vehicle's cigarette lighter plug.

3 DRIVE!
When power is applied the unit will automatically turn on and start recording.

Press to stop recording and to start again.

Pressing at any time will capture a still photo.

Press to create an **Emergency Recording**. Emergency Recordings will not be overwritten by Continuous Loop Recording.

Press to turn the screen **OFF**. The dash cam will continue recording. Press any button to turn the screen back **ON**.



COMPUTER CONNECTION

To view videos on a computer connect the dash cam using the included cable.

Select **Connect to Computer** on the dash cam. It will mount as a drive on the computer called **DriveHD**. Movie clips and photos can be found in the DCIM folder.

Video clips are saved as .MOV files and can be played by most video players on both PC and Mac.



STORAGE
An 8GB MicroSD card comes installed in this dash cam, but it supports cards up to 32GB as long as they are Class IV or higher.

For full product manuals, firmware updates and additional language support, visit www.cobra.com